

MOUNTING ISTRUCTIONS V1.0

Code: AWB504020

Name: ABS Enclosure 500x400x200, waterproof with plastic hinges

closing and base board



AWB504020

EN

Edition I of 2025-01-31

DESTINATION

The AWB series enclosures are designed to protect electronic and electrical devices from water, dust, and mechanical damage.

The AWB series enclosures are made of ABS with an IP66. They are equipped with a mounting plate featuring square perforations for easy installation of devices and flexible arrangement of components inside the enclosure. With their durable construction, they ensure the safety and reliable operation of mounted components.

Hermetic enclosures are available with different sizes. They are designed for a variety of applications in many industries, including:

- security systems for protecting alarm devices, access control or CCTV monitoring
- industrial automation for the protection of control and executive devices
- telecommunication installations to protect telecommunication devices
- electrical installations protection of electrical equipment (electrical switchboards)


TECHNICAL DATA


Mechanical parameters:


Dimensions:	395 x 500 x 200 [mm, +/-2]				
Mounting plate:	350×450 [mm, +/-2] integrated mounting plate with square perforation				
Material:	ABS plastic, light grey,				
Closing:	plastic snap buckle - 2 pcs.				
Destination:	indoor				
Weight:	3.68 / 4.46 [kg]				
Notes:	2 plastic hinges included 4 additional mounting brackets seal hole gasket is installed in the enclosure cover				
Warranty:	2 years				
Declaration:	CE				

Operating parameters:

- Production of the control of the c				
Protection grade EN60529:	IP 66			
Operating conditions:	-20°C +60°C			
Storage temperature:	-20°C +60°C			
Relative humidity:	up to 95% , without condensation			
Sinusoidal vibrations during operation:	unacceptable			
Impulse waves during operation:	unacceptable			
Direct insolation:	unacceptable			
Vibrations and impulse waves during transport:	PN-83/T-42106			

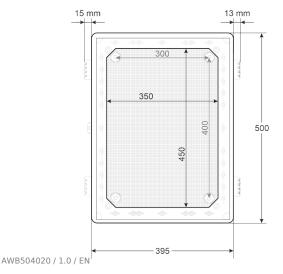

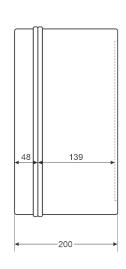

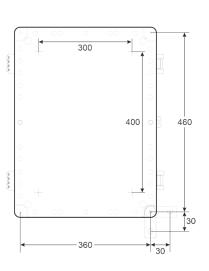







Installation

The enclosure can be mounted in two ways: First, through the mounting points inside the enclosure, allowing for direct and stable attachment to the surface (it is important to properly seal the mounting screws to maintain the enclosure's IP66 protection).





Second, using 4 additional mounting brackets included in the set. Proper installation ensures the enclosure maintains the declared IP66 protection.













Cable installation

To maintain IP66 protection of enclosure, ML145, ML146 or ML147 glands should be used. They guarantee effective protection against water, dust and other pollution, providing adequate hermeticity.

ML146 - M12x1,25, Ø 3-6,5mm


ML147 - M16x1,5, Ø 4-8mm

ML145 - M20x1,5, Ø 6-12mm






Closing / Raster

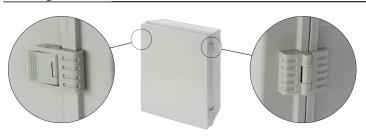



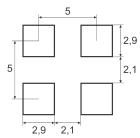





AWB series enclosures

Code	Dimensions WxHxD [+/-2mm]	Mounting plate dimensionsj W ₁ xH ₁ [+/-2mm]	Closing / Hinges	Mounting to the surface	Accessories: glands / Pole mounting bracket
AWB171711	177x177x103	160x160 removable	bolted 4 screws	direct	ML145/146/147
AWB281913	190x280x130	160x250 removable	bolted 4 screws	direct	ML145/146/147 / USH-1
AWB382813	280x380x130	250x350 removable	bolted 4 screws	direct	ML145/146/147 / USH-1
AWB403020	300x400x205	235x335 integrated	snap buckle - 2pcs hinges - 2pcs	direct / adapters - 4pcs	ML145/146/147 / USH-1
AWB504020	395x500x200	350x450 integrated	snap buckle - 2pcs hinges - 2pcs	direct / adapters - 4pcs	ML145/146/147
AWB604022	395x600x225	370x570 removable	snap buckle - 3pcs hinges - 3pcs	direct / adapters - 4pcs	ML145/146/147

Pulsar sp. j.
Siedlec 150, 32-744 Lapczyca, Poland
Tel. +48-14-610-19-45
www.pulsar.pl
e-mail: sales@pulsar.pl







